

FileToTangolImage Tango Python Class

Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
 - [State](#)
 - [Status](#)
 - [StopThread](#)
 - [StartThread](#)
- [Attributes](#)
 - [FileName](#)
 - [DeviceToReadFileName](#)
 - [DirectoryAttribute](#)
 - [FileNameAttribute](#)
 - [Image](#)
- [States](#)

FileToTangolImage Class Identification :

Contact : at mail.desy.de - tneuz
Class Family : Acquisition
Platform : Unix Like
Bus : Not Applicable
Manufacturer : none
Manufacturer ref. :

FileToTangolImage Class Inheritance :

- [Tango::DeviceImpl](#)
 - FileToTangolImage

FileToTangolImage Class Description :

Convert image in a file into a Image Tango Attribute

FileToTangolImage Properties :

There is no class properties

There is no device properties

FileToTangoImage Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its device_state data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its device_status data member) and returns it to the caller.
StopThread	DEV_VOID	DEV_VOID	OPERATOR	Stop thread updating file name
StartThread	DEV_VOID	DEV_VOID	OPERATOR	Start thread updating file name

Command State :

This command gets the device state (stored in its device_state data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::DEV_STATE	Device state
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its device_status data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::CONST_DEV_STRING	Device status
DisplayLevel	OPERATOR	..
Inherited	true	..

Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command StopThread :

Stop thread updating file name

StopThread Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command StartThread :

Start thread updating file name

StartThread Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

FileToTangoImage Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
FileName	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	
DeviceToReadFileName	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Device for taking the image file name.
DirectoryAttribute	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Name of the attribute for reading the directory where the file ist.
FileNameAttribute	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Name of the attribute for reading the image file name.
Image	false	false	Image	READ	Tango::DEV_DOUBLE	OPERATOR	

There is no dynamic attribute defined.

Attribute FileName :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

Write allowed for All states

delta_val

Push Archive event by user code	false
Push DataReady event by user code	false

Attribute DeviceToReadFileName :

Device for taking the image file name.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute DirectoryAttribute :

Name of the attribute for reading the directory where the file ist.

Attribute Definition	

Attribute Properties	

Attribute Event Criteria	
	Not

Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Periodic	set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FileNameAttribute :

Name of the attribute for reading the image file name.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Image :

Attribute Definition	
Attribute Type	Image (10000 x 10000)
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

FileToTangoImage Class States	
Name	Description
ON	
FAULT	
MOVING	If the thread is running