

## Mythen2 Tango Cpp Class

### Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
  - [State](#)
  - [Status](#)
  - [StartAcquisition](#)
- [Attributes](#)
  - [ExposureTime](#)
  - [NbFrames](#)
  - [FileDir](#)
  - [FilePrefix](#)
  - [FileIndex](#)
  - [Counts1](#)
  - [Counts2](#)
  - [CountsTotal](#)
  - [CountsMax](#)
  - [Energy](#)
  - [Threshold](#)
  - [Rol1Start](#)
  - [Rol1End](#)
  - [Rol2Start](#)
  - [Rol2End](#)
  - [Data](#)
- [States](#)

---

### Mythen2 Class Identification :

Contact : at mail.desy.de - tnunez  
Class Family : Acquisition  
Platform : Unix Like  
Bus : Data Socket  
Manufacturer : dectris  
Manufacturer ref. : Mythen2

### Mythen2 Class Inheritance :

- [Tango::DeviceImpl](#)
  - Mythen2

### Mythen2 Class Description :

Class for controlling the Mythen2 detector with software V4p0p1\_V3

---

## Mythen2 Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
HostName	Hostname or ip adress of the detector	String	none

---

Mythen2 Class Commands				
Name	Input type	Output type	Level	Description
<a href="#">State</a>	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its device_state data member) and returns it to the caller.
<a href="#">Status</a>	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its device_status data member) and returns it to the caller.
<a href="#">StartAcquisition</a>	DEV_VOID	DEV_VOID	OPERATOR	Start an acquisition with the programmed number of frames or gates

---

## Command State :

This command gets the device state (stored in its device\_state data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::DEV_STATE	Device state
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	false	..
Polling Period	Not polled	..

Command allowed for	All states	..

---

### **Command Status :**

This command gets the device status (stored in its device\_status data member) and returns it to the caller.

<b>Status Definition</b>		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::CONST_DEV_STRING	Device status
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

### **Command StartAcquisition :**

Start an acquisition with the programmed number of frames or gates

<b>StartAcquisition Definition</b>		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

Mythen2 Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
<a href="#">ExposureTime</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Programmed exposure time for one frame.
<a href="#">NbFrames</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Number of frames within an acquisition
<a href="#">FileDir</a>	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Directory to write the files.
<a href="#">FilePrefix</a>	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Prefix for the file name.
<a href="#">FileIndex</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Index of the file to write to.
<a href="#">Counts1</a>	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Counts in Rol1
<a href="#">Counts2</a>	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Counts in Rol2
<a href="#">CountsTotal</a>	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Counts in complete detector
<a href="#">CountsMax</a>	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Maximum intensity
<a href="#">Energy</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	X-ray energy
<a href="#">Threshold</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Energy threshold
<a href="#">Rol1Start</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol1 start channel
<a href="#">Rol1End</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol1 end channel
<a href="#">Rol2Start</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol2 start channel
<a href="#">Rol2End</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol2 end channel
<a href="#">Data</a>	false	false	Spectrum	READ	Tango::DEV_LONG	OPERATOR	

**There is no dynamic attribute defined.**

---

**Attribute ExposureTime :**

Programmed exposure time for one frame.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	s
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

---

**Attribute NbFrames :**

Number of frames within an acquisition

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE

Attribute Properties	
label	
unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not

Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	set Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute FileDir :**

Directory to write the files.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

code	
Push DataReady event by user code	false

**Attribute FilePrefix :**

Prefix for the file name.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute FileIndex :**

Index of the file to write to.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

### **Attribute Counts1 :**

Counts in Rol1

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not



Read allowed for	All states
------------------	------------

min_warning	
delta_time	
delta_val	

	set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

### **Attribute Counts2 :**

Counts in Rol2

<b>Attribute Definition</b>	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

<b>Attribute Properties</b>	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

<b>Attribute Event Criteria</b>	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

## Attribute CountsTotal :

Counts in complete detector

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

---

## Attribute CountsMax :

Maximum intensity

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set

Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute Energy :**

X-ray energy

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	eV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by	false

**Attribute Threshold :**

Energy threshold

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	eV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute Rol1Start :**

Rol1 start channel

Attribute

Attribute

Attribute Event Criteria

Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

### Attribute Rol1End :

Rol1 end channel

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set

Write allowed for All states

delta\_val

Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute Rol2Start :**

Rol2 start channel

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute Rol2End :**

Rol2 end channel

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

### Attribute Data :

Attribute Definition	
Attribute Type	Spectrum ( 1280 )
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set

Read allowed for	All states
------------------	------------

max_warning	
min_warning	
delta_time	
delta_val	

Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Mythen2 Class States	
Name	Description
ON	
MOVING	Acquiring data.