

## TIP850u10 Tango Cpp Class

### **Contents :**

- [Description](#)
  - [Properties](#)
  - [Commands](#)
    - [State](#)
    - [Status](#)
  - [Attributes](#)
  - [States](#)
- 

### **TIP850u10 Class Identification :**

Contact : at mail.desy.de - tnunez  
Class Family : InputOutput  
Platform : Unix Like  
Bus : VME  
Manufacturer : none  
Manufacturer ref. :

### **TIP850u10 Class Inheritance :**

- [Tango::DeviceImpl](#)
  - TIP850u10

### **TIP850u10 Class Description :**

Master class for TIP850-10 DAC and ADC classes.

---

### **TIP850u10 Properties :**

There is no class properties

There is no device properties

---

TIP850u10 Class Commands				
Name	Input type	Output type	Level	Description
<a href="#">State</a>	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
<a href="#">Status</a>	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.

---

**Command State :**

This command gets the device state (stored in its *device\_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..

Command allowed for	All states	..
---------------------	------------	----

---

**Command Status :**

This command gets the device status (stored in its *device\_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

**There is no attribute defined.**

---

**There is no dynamic attribute defined.**

---



---

**There is no state defined**