

CWGenCtrl Tango Cpp Class

Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
 - [State](#)
 - [Status](#)
- [Attributes](#)
 - [CWGVersion](#)
 - [ActiveCross](#)
 - [Visible](#)
 - [Selected](#)
 - [X](#)
 - [Y](#)
 - [Width](#)
 - [Height](#)
 - [Brightness](#)
- [States](#)

CWGenCtrl Class Identification :

Contact : at desy.de - johannes.blume
Class Family : Miscellaneous
Platform : Unix Like
Bus : Not Applicable
Manufacturer : none
Manufacturer ref. :

CWGenCtrl Class Inheritance :

- [Tango::DeviceImpl](#)
 - CWGenCtrl

CWGenCtrl Class Description :

Controller class for steering a Voelker Crosswire Generator

CWGenCtrl Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
HostName	Hostname of terminal server (or serial device file if compiled for direct serial connection)	String	none
PortNumber	Port number on terminal server (or baud rate if compiled for direct serial connection)	String	""
NoCrossWires	Number of crosswires supported by this device	short	4
ConnectType	either serial or net	String	""
DeviceFile	tty device file name	String	""
BaudRate	tty device baud rate	int	0

CWGenCtrl Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.

Command State :

This command gets the device state (stored in its *device_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.

Output Argument DisplayLevel	Tango::DEV_STATE OPERATOR	State Code ..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

CWGenCtrl Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
CWGVersion	false	false	Scalar	READ	Tango::DEV_STRING	OPERATOR	Controller version string
ActiveCross	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
Visible	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
Selected	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
X	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	

Y	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
Width	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
Height	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
Brightness	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	

There is no dynamic attribute defined.

Attribute CWGVersion :

Controller version string

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute ActiveCross :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Visible :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG

Attribute Properties	
label	
unit	
standard unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set

Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Selected :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user	

code	false
Push DataReady event by user code	false

Attribute X :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Y :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Width :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set

Read allowed for	All states
Write allowed for	All states

max_warning	
min_warning	
delta_time	
delta_val	

Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Height :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Brightness :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

CWGenCtrl Class States	
Name	Description
ON	
FAULT	