

## Keithley6517a Tango Cpp Class

### **Contents :**

- [Description](#)
- [Properties](#)
- [Commands](#)
  - [State](#)
  - [Status](#)
  - [ResetTimestamp](#)
- [Attributes](#)
  - [Current](#)
  - [Range](#)
  - [MeasurementFunction](#)
  - [VoltIntegrationPeriod](#)
  - [CurrIntegrationPeriod](#)
  - [CharIntegrationPeriod](#)
  - [VoltRange](#)
  - [CurrRange](#)
  - [CharRange](#)
  - [VSource](#)
  - [ResIntegrationPeriod](#)
  - [VSourceOffOn](#)
  - [CurrAutoRange](#)
  - [VoltAutoRange](#)
  - [CharAutoRange](#)
  - [CurrRange20mA](#)
  - [CurrRange2mA](#)
  - [CurrRange200microA](#)
  - [CurrRange20microA](#)
  - [CurrRange2microA](#)
  - [CurrRange200nA](#)
  - [CurrRange20nA](#)
  - [CurrRange2nA](#)
  - [CurrRange200pA](#)
  - [CurrRange20pA](#)
  - [ZeroCheck](#)
  - [CurrentWithTimestamp](#)
- [States](#)

### **Keithley6517a Class Identification :**

Contact : at mail.desy.de - tnunez  
 Class Family : Instrumentation  
 Platform : Unix Like  
 Bus : GPIB  
 Manufacturer : Keithley  
 Manufacturer ref. : 6517a

### **Keithley6517a Class Inheritance :**

- [Tango::DeviceImpl](#)
  - Keithley6517a

## Keithley6517a Class Description :

Class for controlling the Keithley6517a electrometer

---

## Keithley6517a Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
GpibDevice	Name of the gpib device connected to the hardware.	String	none

---

Keithley6517a Class Commands				
Name	Input type	Output type	Level	Description
<a href="#">State</a>	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
<a href="#">Status</a>	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.
<a href="#">ResetTimestamp</a>	DEV_VOID	DEV_VOID	OPERATOR	Reset timestamp to 0

---

## Command State :

This command gets the device state (stored in its *device\_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..

Command allowed for All states ..

---

### **Command Status :**

This command gets the device status (stored in its *device\_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

### **Command ResetTimestamp :**

Reset timestamp to 0

ResetTimestamp Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

Keithley6517a Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description

<a href="#">Current</a>	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Measured
<a href="#">Range</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	current
<a href="#">MeasurementFunction</a>	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Set/get measurement function. Valid values: VOLT, CURR, RES, CHAR
<a href="#">VoltIntegrationPeriod</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Integration period for voltage measurements.
<a href="#">CurrIntegrationPeriod</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Integration period for current measurements.
<a href="#">CharIntegrationPeriod</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Integration period for charge measurements.
<a href="#">VoltRange</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Measurement range for Volts
<a href="#">CurrRange</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Measurement range for Amps
<a href="#">CharRange</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Measurement range for Coulombs
<a href="#">VSource</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	V-Source level for manual V-source Ohms.
<a href="#">ResIntegrationPeriod</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Integration period for resistance measurements.
<a href="#">VSourceOffOn</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Enable/disable (1/0) V-Source level for manual V-source Ohms.
<a href="#">CurrAutoRange</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	1 -> ON, 0 -> OFF
<a href="#">VoltAutoRange</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	1 -> ON, 0 -> OFF
<a href="#">CharAutoRange</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	1 -> ON, 0 -> OFF
<a href="#">CurrRange20mA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 20 mA
<a href="#">CurrRange2mA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 2 mA
<a href="#">CurrRange200microA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 200 microA
<a href="#">CurrRange20microA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 20 microA

<a href="#">CurrRange2microA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 2 microA
<a href="#">CurrRange200nA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 200 nA
<a href="#">CurrRange20nA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 20 nA
<a href="#">CurrRange2nA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 2 nA
<a href="#">CurrRange200pA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 200 pA
<a href="#">CurrRange20pA</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	1 if current range 20 pA
<a href="#">ZeroCheck</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	0 -> off, 1 -> on
<a href="#">CurrentWithTimestamp</a>	false	false	Spectrum	READ	Tango::DEV_DOUBLE	OPERATOR	

**There is no dynamic attribute defined.**

**Attribute Current :**

Measured current

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### Attribute Range :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### Attribute MeasurementFunction :

Set/get measurement function. Valid values: VOLT, CURR, RES, CHAR

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set

Read allowed for	All states
Write allowed for	All states

max_warning	
min_warning	
delta_time	
delta_val	

Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute VoltIntegrationPeriod :**

Integration period for voltage measurements.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	Cycles
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute CurrIntegrationPeriod :**

Integration period for current measurements.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	Cycles
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute CharIntegrationPeriod :**

Integration period for charge measurements.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	Cycles
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false



Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute VoltRange :**

Measurement range for Volts

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	V
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute CurrRange :**

Measurement range for Amps

Attribute Definition	
Attribute Type	Scalar

Attribute Properties	
label	

Attribute Event Criteria	
Periodic	Not set

R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

unit	A
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute CharRange :**

Measurement range for Coulombs

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	C
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute VSource :**

V-Source level for manual V-source Ohms.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	V
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute ResIntegrationPeriod :**

Integration period for resistance measurements.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	Cycles
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set

Read allowed for	All states
Write allowed for	All states

min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute VSourceOffOn :**

Enable/disable (1/0) V-Source level for manual V-source Ohms.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	0->off,1->on
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute CurrAutoRange :**

1 -> ON, 0 -> OFF

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### Attribute VoltAutoRange :

1 -> ON, 0 -> OFF

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute CharAutoRange :**

1 -> ON, 0 -> OFF

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute CurrRange20mA :**

1 if current range 20 mA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ

Attribute Properties	
label	
unit	

Attribute Event Criteria	
Periodic	Not set
	Not set

Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Relative Change	set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute CurrRange2mA :**

1 if current range 2 mA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute CurrRange200microA :**

1 if current range 200 microA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute CurrRange20microA :**

1 if current range 20 microA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set



Read allowed for	All states
------------------	------------

min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute CurrRange2microA :**

1 if current range 2 microA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute CurrRange200nA :**

1 if current range 200 nA



Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

### **Attribute CurrRange20nA :**

1 if current range 20 nA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

---

**Attribute CurrRange2nA :**

1 if current range 2 nA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

---

**Attribute CurrRange200pA :**

1 if current range 200 pA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set

Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

### **Attribute CurrRange20pA :**

1 if current range 20 pA

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

### **Attribute ZeroCheck :**

0 -> off, 1 -> on

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

**Attribute CurrentWithTimestamp :**

Attribute Definition	
Attribute Type	Spectrum ( 2 )
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Push DataReady event by user code	false
-----------------------------------	-------

---

---

<b>Keithley6517a Class States</b>	
<b>Name</b>	<b>Description</b>
ON	
FAULT	