

MMC100MicosAxis Tango Cpp Class

Contents :

- [Description](#)
 - [Properties](#)
 - [Commands](#)
 - [State](#)
 - [Status](#)
 - [Calibrate](#)
 - [StopMove](#)
 - [ResetMotor](#)
 - [ReadAndClearError](#)
 - [Attributes](#)
 - [Position](#)
 - [UnitLimitMin](#)
 - [UnitLimitMax](#)
 - [SlewRate](#)
 - [Conversion](#)
 - [States](#)
-

MMC100MicosAxis Class Identification :

Contact : at mail.desy.de - tneuz
Class Family : Motion
Platform : Unix Like
Bus : USB
Manufacturer : Micos
Manufacturer ref. : MMC-100

MMC100MicosAxis Class Inheritance :

- [Tango::DeviceImpl](#)
 - MMC100MicosAxis

MMC100MicosAxis Class Description :

Class for controlling an axis connected to the Micos Serie MMC-100 controller.

Piezos Micos Serie MMC-100 Device Description

MMC100Micos Class

Revision: - Author:

Class for controlling piezos from Micos Serie MMC-100

MMC100MicosAxis Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
SimulationMode	1 if running in simulation mode	int	0
ControllerDS	Name of the Tango device connecting to the controller	String	none
AxisNb	Axis number (1-99)	int	none
HasEncoder		boolean	none

MMC100MicosAxis Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.
Calibrate	DEV_DOUBLE	DEV_VOID	OPERATOR	None.
StopMove	DEV_VOID	DEV_VOID	OPERATOR	None.
ResetMotor	DEV_VOID	DEV_VOID	OPERATOR	Read error and clear.
ReadAndClearError	DEV_VOID	DEV_STRING	OPERATOR	Read error message and clear the error status.

Command State :

This command gets the device state (stored in its *device_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Calibrate :

Calibrate Definition		
Input Argument	Tango::DEV_DOUBLE	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
		..
Command allowed for	All states	..

Command StopMove :

StopMove Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
		..
Command allowed for	All states	..

Command ResetMotor :

Read error and clear.

ResetMotor Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command ReadAndClearError :

Read error message and clear the error status.

ReadAndClearError Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_STRING	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

MMC100MicosAxis Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
Position	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
UnitLimitMin	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
UnitLimitMax	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	

SlewRate	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
Conversion	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	

There is no dynamic attribute defined.

Attribute Position :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mm (degrees)
standard unit	
display unit	
format	
max_value	1000.
min_value	-1000.
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute UnitLimitMin :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mm (degrees)
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute UnitLimitMax :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR

Attribute Properties	
label	
unit	mm (degrees)
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set

Inherited Abstract	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute SlewRate :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mm(degrees)/s
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady	false

Attribute Conversion :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

MMC100MicosAxis Class States	
Name	Description
ON	

MOVING	
FAULT	