

PitchRollCorrection Tango Cpp Class

Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
 - [State](#)
 - [Status](#)
- [Attributes](#)
 - [Position](#)
 - [DCMparallelOld](#)
 - [DCMparallelNew](#)
 - [MTH2](#)
 - [MCHI2](#)
 - [MTH2Calc](#)
 - [MCHI2Calc](#)
 - [SignMth2](#)
 - [SignMchi2](#)
- [States](#)

PitchRollCorrection Class Identification :

Contact : at mail.desy.de - tnunez
 Class Family : Motion
 Platform : Unix Like
 Bus : Not Applicable
 Manufacturer : none
 Manufacturer ref. :

PitchRollCorrection Class Inheritance :

- [Tango::DeviceImpl](#)
 - PitchRollCorrection

PitchRollCorrection Class Description :

Class for correcting motor positions according to the parallel motor old and new positions.

PitchRollCorrection Properties :

There is no class properties

There is no device properties

PitchRollCorrection Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.

Command State :

This command gets the device state (stored in its *device_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

PitchRollCorrection Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
Position	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Energy value.
DCMparallelOld	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Position of the dcm parallel motor before doing the movement.
DCMparallelNew	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Parallel position computed from the energy.
MTH2	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Current mth2 position
MCHI2	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Current mchi2 position
MTH2Calc	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Calculated mth2 position
MCHI2Calc	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Calculated mchi2 position
							Sign for the correction

SignMth2	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	factor of the mth2
SignMchi2	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Sign for the correction factor of the mchi2

There is no dynamic attribute defined.

Attribute Position :

Energy value.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	eV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute DCMparallelOld :

Position of the dcm parallel motor before doing the movement.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	mm
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute DCMparallelNew :

Parallel position computed from the energy.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR

Attribute Properties	
label	
unit	mm
standard unit	
display unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set

Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute MTH2 :

Current mth2 position

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	degrees
standard unit	
display unit	
format	%11.9f
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Push DataReady event by user code	Not set
-----------------------------------	---------

Attribute MCHI2 :

Current mchi2 position

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	degrees
standard unit	
display unit	
format	%11.9f
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute MTH2Calc :

Calculated mth2 position

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	degrees
standard unit	
display unit	
format	%11.9f
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute MCHI2Calc :

Calculated mchi2 position

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled

Attribute Properties	
label	
unit	degrees
standard unit	
display unit	
format	%11.9f
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set

Memorized	Not set
Read allowed for	All states

min_warning	
delta_time	
delta_val	

Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute SignMth2 :

Sign for the correction factor of the mth2

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	1
min_value	-1
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute SignMchi2 :

Sign for the correction factor of the mchi2

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	1
min_value	-1
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

PitchRollCorrection Class States	
Name	Description
ON	
MOVING	
FAULT	