

RBRtemperature Tango Cpp Class

Contents :

- [Description](#)
 - [Properties](#)
 - [Commands](#)
 - [State](#)
 - [Status](#)
 - [Attributes](#)
 - [States](#)
-

RBRtemperature Class Identification : RBRtemperature Class Inheritance :

Contact	: at null - null	○ Tango::DeviceImpl
Class Family	:	■ RBRtemperature
Platform	:	
Bus	:	
Manufacturer	:	
Manufacturer ref.	:	

RBRtemperature Class Description :

this class exports 8 temperature attributes from the controller

RBRtemperature Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
Serialname	name of the serial line tango device	String	id22eh2/serial/rbr

RBRtemperature Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.

Command State :

This command gets the device state (stored in its *device_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..

Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

There is no attribute defined.

There is no dynamic attribute defined.

There is no state defined