

ThermocoupleioLogikE2262 Tango Cpp Class

Contents :

- [Description](#)
 - [Properties](#)
 - [Commands](#)
 - [State](#)
 - [Status](#)
 - [Attributes](#)
 - [Enable_00](#)
 - [Enable_01](#)
 - [Enable_02](#)
 - [Enable_03](#)
 - [Enable_04](#)
 - [Enable_05](#)
 - [Enable_06](#)
 - [Enable_07](#)
 - [Stype_00](#)
 - [Stype_01](#)
 - [Stype_02](#)
 - [Stype_03](#)
 - [Stype_04](#)
 - [Stype_05](#)
 - [Stype_06](#)
 - [Stype_07](#)
 - [Utype_00](#)
 - [Utype_01](#)
 - [Utype_02](#)
 - [Utype_03](#)
 - [Utype_04](#)
 - [Utype_05](#)
 - [Utype_06](#)
 - [Utype_07](#)
 - [CStatus_00](#)
 - [CStatus_01](#)
 - [CStatus_02](#)
 - [CStatus_03](#)
 - [CStatus_04](#)
 - [CStatus_05](#)
 - [CStatus_06](#)
 - [CStatus_07](#)
 - [States](#)
-

ThermocoupleioLogikE2262 Class

Identification :

Contact : at mail.desy.de - tnunez
Class Family : Instrumentation
Platform : Unix Like
Bus : Ethernet
Manufacturer : Moxa
Manufacturer ref. : ioLogikE2262

ThermocoupleioLogikE2262 Class

Inheritance :

- [Tango::DeviceImpl](#)
 - ThermocoupleioLogikE2262

ThermocoupleioLogikE2262 Class Description :

Server for controlling the thermocouple ioLogikE2262

ThermocoupleioLogikE2262 Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
IpAddress	Ip Address (ex. haspp04t11.desy.de)	String	none

ThermocoupleioLogikE2262 Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its device_state data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its device_status data member) and returns it to the caller.

Command State :

This command gets the device state (stored in its device_state data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::DEV_STATE	Device state
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its device_status data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::CONST_DEV_STRING	Device status
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

CStatus_03	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	value in physical units
CStatus_04	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Measured value in physical units
CStatus_05	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Measured value in physical units
CStatus_06	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Measured value in physical units
CStatus_07	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Measured value in physical units

There is no dynamic attribute defined.

Attribute Enable_00 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	(0:Disable, 1:Enable)
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute	Not

Read allowed for	All states
Write allowed for	All states

min_warning	
delta_time	
delta_val	

Change	set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Enable_01 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:Disable, 1:Enable)
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Enable_02 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:Disable, 1:Enable)
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Enable_03 :

Attribute Definition	
Attribute Type	Scalar

Attribute Properties	
label	
unit	(0:Disable,

Attribute Event Criteria	
Periodic	Not set

R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

	1:Enable)
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Enable_04 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read	All states

Attribute Properties	
label	
unit	(0:Disable, 1:Enable)
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set

allowed for Write	
allowed for	All states

delta_time	
delta_val	

Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Enable_05 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:Disable, 1:Enable)
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Enable_06 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:Disable, 1:Enable)
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Enable_07 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG

Attribute Properties	
label	
unit	(0:Disable, 1:Enable)
standard unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set

Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Stype_00 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write	All states

Attribute Properties	
label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set

allowed for	
-------------	--

delta_time	
delta_val	

Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Style_01 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Stype_02 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Push DataReady event by user code	false
-----------------------------------	-------

Attribute Style_03 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Stype_04 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Stype_05 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Stype_06 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Stype_07 :

Attribute Definition	

Attribute Properties	

Attribute Event	

Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

label	
unit	(0:J, 1:K,2:T,3:E,4:R,5:S,6:B,7:N Type,8:78.126mV, 9:39.062mV, 10:19.532mV)
standard unit	
display unit	
format	
max_value	10
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Utype_00 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set

Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Utype_01 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write	All states

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	
display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

allowed for

Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Utype_02 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	
display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Utype_03 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	
display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Utype_04 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set

Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Utype_05 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	
display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event	

by user code	false
Push DataReady event by user code	false

Attribute Utype_06 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	
display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Utype_07 :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	(0: Celsius, 1: Faraday, 2:mV)
standard unit	
display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute CStatus_00 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set

Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute CStatus_01 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Push DataReady event by user code	false
-----------------------------------	-------

Attribute CStatus_02 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute CStatus_03 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute CStatus_04 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not

Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

	set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute CStatus_05 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by	

Attribute CStatus_06 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute CStatus_07 :

Measured value in physical units

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

ThermocoupleioLogikE2262 Class States	
Name	Description
ON	
FAULT	